

20-GALLON OIL DRAIN WITH CASTERS

OWNER'S MANUAL



WARNING: Read carefully and understand all INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

ltem #103185

Thank you very much for choosing a Wel-Bilt product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____ Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This machine is designed for certain applications only. The distributor cannot be responsible for issues arising from modification. We strongly recommend this machine is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the machine until you have first contacted the distributor to determine if it can or should be performed on the product.

For technical questions please call 1-800-222-5381.

INTENDED USE

Heavy-duty unit collects drained vehicle oil and other fluids.

TECHNICAL SPECIFICATIONS & PACKING LIST

ltem	Description
Capacity	20 gallons
Casters	Two swivel casters
Wheels	Two nylon wheels

GENERAL SAFETY RULES

WARNING: Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.

WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

SAVE THESE INSTRUCTIONS

WORK AREA

- Keep work area clean, free of clutter and well lit. Cluttered and dark work areas can cause accidents.
- Do not use your oil drain where there is a risk of causing a fire or an explosion; e.g. in the presence of flammable liquids, gasses, or dust.
- **Keep children and bystanders** away while using the oil drain. Distractions can cause you to lose control, so visitors should remain at a safe distance from the work area.
- Be aware of all power lines, electrical circuits, water pipes and other mechanical hazards in your work area, particularly those hazards below the work surface hidden from the

operator's view that may be unintentionally contacted and may cause personal harm or property damage.

PERSONAL SAFETY

- **Stay alert**, watch what you are doing and use common sense when using an oil drain. Do not drain fluids while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while working may result in serious personal injury.
- **Dress properly.** Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- Use safety apparel and equipment. Use safety goggles or safety glasses with side shields which comply with current national standards, or when needed, a face shield. This applies to all persons in the work area. Also use non-skid safety shoes, hardhat, gloves, dust collection systems, and hearing protection when appropriate.
- **Do not overreach.** Keep proper footing and balance at all times.
- Never exceed the rated capacity of 20 gallons of used oil or other vehicle fluids.

TOOL USE AND CARE

- **Do not force the oil drain.** All tools do a better and safer job when used in the manner for which they are designed. Plan your work, and use the correct tool for the job.
- **Store idle oil drains.** When the oil drain is not is use, store it in a dry, secure place out of the reach of children. Inspect tools for good working condition prior to storage and before reuse.
- Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may create a risk of injury when used on another tool.
- Never leave an oil drain filled with fluid and left unattended.

OPERATION

DRAIN OIL INTO TANK

- Air line must be disconnected from tank.
- Raise drain bowl/tube to desired height and lock in place by turning knob clockwise.
- Main valve must be fully open, with valve handle in vertical position. Do not overfill tank. Check sight gauge tube frequently. Do not fill above hose strap.


REMOVING OIL FROM TANK

- The tank should be wheeled to the main oil collection reservoir.
- Place drain nozzle securely into reservoir opening.
- With drain bowl raised, main valve must be fully closed, with valve handle in horizontal position.
- Connect air supply to tank (maximum supply pressure of 150 PSI)
- Oil will drain from tank into reservoir. Disconnect air supply when finished.

MAINTENANCE

• Maintain your oil drain. It is recommended that the general condition of any tool be examined before it is used. Keep your oil drain in good repair by adopting a program of conscientious repair and maintenance in accordance with the recommended procedures found in this manual.

DIAGRAM & PARTS LIST

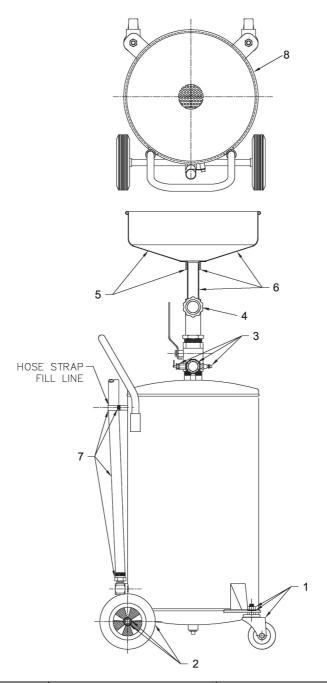

Part#	Description	Qty.
1	Caster Kit	1
2	Wheel Kit	1
3	Regulator Kit	1
4	Locking Knob Kit	1
5	Bow Kit	1
6	Bowl & Ext Tube Kit	1
7	Drain Hose Kit	1
8	Ball Valve Kit	4

For replacement parts and technical questions, please call **1-800-222-5381**.

WARRANTY

One Year Limited Warranty



Distributed by: Northern Tool + Equipment Co., Inc. Burnsville, MN 55306 NorthernTool.com Made in China