

When inflating truck or trailer tires requiring pressure greater than 50 psi, it is recommended that the tire is deflated manually to 40 psi or less before beginning inflation. This operation allows the inflator to gradually reach the desired pressure and prevents the inflator's pump from stalling.

6. Once desired pressure is reached, turn power switch to the "O" (OFF) position. Recommended air pressure.

7. Unplug the power cord from 12V DC power outlet.

8. Remove the air hose attachment from the tire valve threads by turning in a counterclockwise direction.

OPERATING INSTRUCTIONS - TIRES

- Air Accessories Include: Sports Ball Needle, Ratt & Toy Inflator Nozzles, Presta Valve Adapter
- 15" Air Hose with Screw-On Chuck
- 10 Ft. Power Cord with 12V Power Cord
- Plugs into any 12V vehicle power outlet; Input 12V with 15A fuse

WARNING: DO NOT RUN VEHICLE ENGINE INSIDE A CONFINED AREA SUCH AS A GARAGE as bodily injury or asphyxiation resulting in death can occur. ALWAYS ALLOW FOR PROPER VENTILATION.

- Most vehicle 12 Volt power outlets will operate with vehicle ignition off; however, some vehicles require that the ignition be turned on.
- THIS INFLATOR IS NOT DESIGNED TO FILL AIR TANKS OR AIR SHOCKS.

OPERATING INSTRUCTIONS - INFLATABLES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.
2. To use the inflation accessories, screw either piece into the air hose connector from the inflator by turning the hose attachment onto the inflation accessory threads in a clockwise direction until secure.
3. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

TROUBLE SHOOTING

INFLATOR DOES NOT WORK WHEN SWITCHED TO "ON"

- Power cord may not be plugged in completely. Check the connection.
- Check vehicle power outlet and power plug terminals for dirt. Use a non-conductive probe, not fingers or metal, to clean.
- Check vehicle power outlet fuse, which should be a minimum of 15 Amps.
- Fuse may have blown. Check fuse in power plug adaptor and replace if necessary with one of the same amperage. NEVER replace a blown fuse with a fuse having a higher rating.

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.
 2. Remove valve cap from stem.
 3. Attach the air hose connector from the inflator to the valve stem by turning the hose attachment onto the valve stem threads in a clockwise direction.
 4. Plug power cord into 12V DC power outlet.
- WARNING** For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.
5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's

- Large Dial Pressure Gauge
- 3 Super Bright LED Lights for Night-Time Emergencies
- Dual On/Off Switches for Inflator and LED lights
- Storage Compartment

FEATURES

- Keep inflator dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or attachments that are included.
 - Operate the inflator only with the fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.
- FEATURES**
- Your vehicle's 12 Volt battery must be fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.
 - USE SAFETY GLASSES. Also use face or dust mask if operation is dusty.
 - Operate the inflator only with the fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.

4. Insert the appropriate inflation accessory into the inflatable object (tire, football, raft, etc.).
5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.
6. When the object is firm, turn power switch to the "O" (OFF) position. DO NOT OVER INFLATE OBJECTS.
7. Unplug the power cord from 12V DC power outlet.

UNIT IS RUNNING BUT TIRE IS NOT INFLATING

- Check that the air hose connector is attached properly to the tire valve stem.
- Check for tire leaks or damage, and check air hose for breaks and leaks at fittings.

INFLATOR FEELS HOT OR RUNS SLOWLY

- Unit may have overheated. Shut the unit off and allow to cool for 20-25 minutes.
- NEVER use this inflator for more than 10 minutes continuously.
- Voltage may be too low. Check condition of vehicle battery.

- NEVER use in traffic or other unsafe areas.
- NEVER leave the inflator running unattended.
- DO NOT carry the inflator by the air hose or power cord as damage may occur.
- Disconnect power when not in use.
- Do not operate inflator near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite tires.
- Do not operate or store your inflator in a damp or wet locations.

CAUTION

recommended pressure for any inflatable object. DO NOT OVER-INFLATE OBJECTS. Over inflation can cause personal injury and/or property damage.

IMPORTANT SAFETY INFORMATION

- **CAUTION** Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.
- **NOTICE** Notice indicates important information, that if not followed, may cause damage to equipment.

SAFETY GUIDELINES / DEFINITIONS



12V Tire Inflator with LED Light

Model No. 60402

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



WARNING

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.

- **WARNING** Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.
- **WARNING** Do not hold in hand while operating. Place compressor on ground during use.
- DO NOT run compressor for more than 10 minutes continuously.
- ALLOW THE COMPRESSOR TO COOL AT LEAST 10 MINUTES AFTER EACH 10 MINUTES OF CONTINUOUS USE.
- NEVER use in traffic or other unsafe areas.
- NEVER leave the inflator running unattended.
- DO NOT carry the inflator by the air hose or power cord as damage may occur.
- Disconnect power when not in use.
- Do not operate inflator near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite tires.
- Do not operate or store your inflator in a damp or wet locations.

- **DANGER** Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING** Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

SAFETY GUIDELINES / DEFINITIONS



12V Tire Inflator with LED Light

Model No. 60402

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



WARNING

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.

