

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.
2. To use inflation accessories, screw the desired accessory into the chuck securely.
3. Plug power cord into 12V DC power outlet.
4. Insert the appropriate inflation power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.
5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.
6. When the object is firm, turn power switch to the "O" (OFF) position. DO NOT OVER INFLATE OBJECTS.
7. To operate light, toggle switch from the "OFF" (O) position to either the "LOW" (I) or "HIGH" (II) positions.
8. Unplug the power cord from 12V DC power outlet.

OPERATING INSTRUCTIONS

- Air accessories include: sport ball and raft inflator adapters
- 40 in. High pressure hose length with screw-on chuck
- 9.5 Ft. 12V power cord - Plugs into 12 volt accessory outlet

FEATURES

- Accurate, easy to read pressure gauge
 - Easy on/off switch
 - Two setting light switch
 - Bright light for emergencies
 - Powerful 12 volt, 150 PSI motor
- oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvent to clean the inflator. Operate the inflator only with the attachments that are included.
- USE SAFETY GLASSES. Also use face or dust mask if operation is dusty.
 - Your vehicle's 12 Volt battery must be fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.
 - For best results, it is recommended that you operate your inflator with your vehicle's engine running.
- ## WARNING: DO NOT RUN VEHICLE ENGINE INSIDE A CONFINED AREA SUCH AS A GARAGE as bodily injury or asphyxiation resulting in death can occur. ALWAYS ALLOW FOR PROPER VENTILATION.
- Most vehicle 12 Volt power outlets will operate with vehicle ignition off; however, some vehicles require that the ignition be turned on.
 - THIS INFLATOR IS NOT DESIGNED TO FILL AIR TANKS OR AIR SHOCKS.

TROUBLE SHOOTING

INFLATOR DOES NOT WORK WHEN SWITCHED TO "ON"

- Power cord may not be plugged in completely. Check the connection.
- Check vehicle power outlet and power plug terminals for dirt. Use a non-conductive probe, not fingers or metal, to clean.
- Check vehicle power outlet fuse, which should be a minimum of 15 Amps.
- Fuse may have blown. Check fuse in power plug adaptor and replace if necessary with one of the same amperage. NEVER replace a blown fuse with a fuse having a higher rating.

UNIT IS RUNNING BUT TIRE IS NOT INFLATING

- Check that the air hose connector is attached properly to the tire valve stem.
- Check for tire leaks or damage, and check air hose for breaks and leaks at fittings.

INFLATOR FEELS HOT OR RUNS SLOWLY

- Unit may have overheated. Shut the unit off and allow to cool for 20-25 minutes.
- NEVER use this inflator for more than 10 minutes continuously.
- Voltage may be too low. Check condition of vehicle battery.



P.O. Box 88259 Tukwila, WA 98138 • © 2011 Wilmar Corporation
All rights reserved • airTIGHT™ is a trademark of Wilmar Corporation

- Keep inflator dry, clean, and free from damp or wet locations.
 - Do not operate or store your inflator in a fumes.
 - Do not operate or store your inflator in a liquids or in gaseous or explosive atmospheres. Internal sparks may ignite tires, bike tires, ATV tires, sports equipment, air mattresses, beach toys and other inflatables. DO NOT USE FOR ANY PURPOSE OTHER THAN INFLATING. BODILY HARM OR PERSONAL INJURY CAN OCCUR.
 - NEVER exceed the manufacturer's recommended pressure for any inflatable
- object. DO NOT OVER-INFLATE OBJECTS. Over inflation can cause personal injury and/or property damage.
- ## CAUTION
- HOT - Do not hold in hand while operating. Place compressor on ground during use.
 - DO NOT run compressor for more than 10 minutes continuously.
 - ALLOW THE COMPRESSOR TO COOL AT LEAST 10 MINUTES AFTER EACH 10 MINUTES OF CONTINUOUS USE.
 - NEVER use in traffic or other unsafe areas.
 - NEVER leave the inflator running unattended.
 - DO NOT carry the inflator by the air hose or power cord as damage may occur.
 - Disconnect power when not in use.
 - Do not operate inflator near flammable tires, bike tires, sports equipment, air mattresses, beach toys and other inflatables. DO NOT USE FOR ANY PURPOSE OTHER THAN INFLATING. BODILY HARM OR PERSONAL INJURY CAN OCCUR.
 - NEVER exceed the manufacturer's recommended pressure for any inflatable

IMPORTANT SAFETY INFORMATION

- DANGER Danger indicates an imminent hazardous situation which, if not avoided, will result in death or serious injury.
- WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.

SAFETY GUIDELINES / DEFINITIONS



12V Heavy Duty Tire Inflator

Model No. 60404

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



WARNING

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.