

• NEVER exceed the manufacturer's PERSONAL INJURY CAN OCCUR. INFLATING, BODILY HARM OR ANY PURPOSE OTHER THAN AND OTHER INFLATABLES. DO NOT USE FOR equipment, air mattresses, beach toys tires, bike tires, ATV tires, sports tires. This inflator is designed to inflate car receptacles.

• For use with any 12V DC power outlet rated 15 Amps or higher. Do NOT use with older 8 Amp cigarette lighter with older 8 Amp cigarette lighter receptacles.

• NEVER leave the inflator running unattended.

• DO NOT carry the inflator by the air hose or power cord as damage may occur.

• Disconnect power when not in use.

• Do not operate inflator near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite tires.

• Do not operate or store your inflator in a damp or wet locations.

WARNING Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.

WARNING Danger indicates an imminent hazardous situation which, if not avoided, will result in death or serious injury. Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

IMPORTANT SAFETY INFORMATION

• Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.

WARNING Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.

CAUTION Danger indicates an imminent hazardous situation which, if not avoided, will result in death or serious injury. Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.

CAUTION Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION Do not hold in hand while operating. Place compressor on ground during use.

• DO NOT run compressor for more than 10 minutes continuously.

• USE 12 VOLT DC power only. Make sure that your vehicle's 12 Volt power outlet is free of any ash residue or debris. A dirty 12 Volt power outlet can cause the inflator and power cord to overheat. Overheating can cause damage to your inflator/vehicle and could cause bodily harm or injury.

• For use with any 12V DC power outlet rated 15 Amps or higher. Do NOT use with older 8 Amp cigarette lighter receptacles.

• NEVER use in traffic or other unsafe areas.

• NEVER leave the inflator running unattended.

• DO NOT carry the inflator by the air hose or power cord as damage may occur.

• Disconnect power when not in use.

• Do not operate inflator near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite tires.

• Do not operate or store your inflator in a damp or wet locations.

SAFETY GUIDELINES / DEFINITIONS

DANGER Danger indicates an imminent hazardous situation which, if not avoided, will result in death or serious injury.

WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.

CAUTION Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

OPERATING INSTRUCTIONS - INFLATABLES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. To use the inflation accessories, snap either piece into the universal adapter and push the lever to lock into place. The inflation accessory will fit securely.

3. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

airTIGHT

12V Mini Tire Inflator

Model No. 60400

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



WARNING Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. Remove valve cap from stem.

3. Attach the universal adapter from the inflator to the valve stem with the lever in the up position. Be sure to press the universal adapter down over valve stem threads completely. When universal adapter is firmly in place, press locking lever down to lock onto valve stem.

4. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.

6. Once desired pressure is reached, turn power switch to the "O" (OFF) position.

7. Unplug the power cord from 12V DC power outlet.

8. Remove the universal connector from the tire valve.

When inflating truck or trailer tires requiring pressure greater than 50 psi, it is recommended that the tire is deflated manually to 40 psi or less before beginning inflation. This operation allows the inflator to gradually reach the desired pressure and prevents the inflator's pump from stalling.

OPERATING INSTRUCTIONS - TIRES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. Remove valve cap from stem.

3. Attach the universal adapter from the inflator to the valve stem with the lever in the up position. Be sure to press the universal adapter down over valve stem threads completely. When universal adapter is firmly in place, press locking lever down to lock onto valve stem.

4. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.

6. Once desired pressure is reached, turn power switch to the "O" (OFF) position.

7. Unplug the power cord from 12V DC power outlet.

8. Remove the universal connector from the tire valve.

When inflating truck or trailer tires requiring pressure greater than 50 psi, it is recommended that the tire is deflated manually to 40 psi or less before beginning inflation. This operation allows the inflator to gradually reach the desired pressure and prevents the inflator's pump from stalling.

OPERATING INSTRUCTIONS - TIRES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. Remove valve cap from stem.

3. Attach the universal adapter from the inflator to the valve stem with the lever in the up position. Be sure to press the universal adapter down over valve stem threads completely. When universal adapter is firmly in place, press locking lever down to lock onto valve stem.

4. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.

6. Once desired pressure is reached, turn power switch to the "O" (OFF) position.

7. Unplug the power cord from 12V DC power outlet.

8. Remove the universal connector from the tire valve.

When inflating truck or trailer tires requiring pressure greater than 50 psi, it is recommended that the tire is deflated manually to 40 psi or less before beginning inflation. This operation allows the inflator to gradually reach the desired pressure and prevents the inflator's pump from stalling.

OPERATING INSTRUCTIONS - TIRES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. To use the inflation accessories, snap either piece into the universal adapter and push the lever to lock into place. The inflation accessory will fit securely.

3. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

OPERATING INSTRUCTIONS - TIRES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. To use the inflation accessories, snap either piece into the universal adapter and push the lever to lock into place. The inflation accessory will fit securely.

3. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

4. Insert the appropriate inflation accessory into the inflatable object (tire, football, raft, etc.).

5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.

6. When the object is firm, turn power switch to the "O" (OFF) position. DO NOT OVER INFLATE OBJECTS.

7. Unplug the power cord from 12V DC power outlet.

OPERATING INSTRUCTIONS - TIRES

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. To use the inflation accessories, snap either piece into the universal adapter and push the lever to lock into place. The inflation accessory will fit securely.

3. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.