


Regulator Assembly

3000 Series

Parts Information





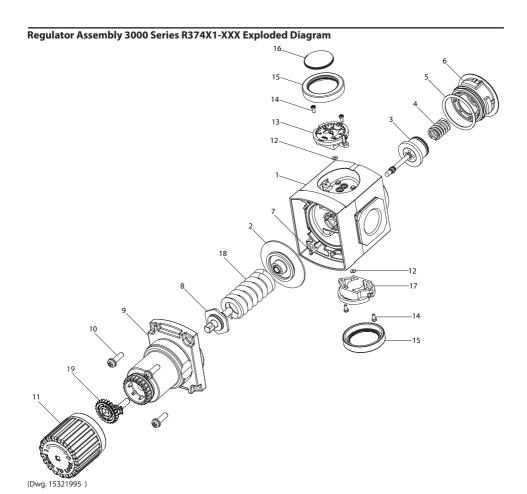


Regulator Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number	Item	Part Description	Material	Part Number
1	Regulator Body			14	Block Cover Bolt	Steel	
	3/4" NPT (R37451-XXX)			15	Cover Ring	Nylon	
	1" NPT (R37461-XXX)	Aluminum		16	Gauge Cover	Polycarbonate	
	3/4" BSP (R374E1-XXX)			17	Block Cover	Nylon	
	1" BSP (R374F1-XXX)			18	Adjusting Spring		
2	Diaphragm Assembly			l	0-50 psi (R374X1-2XX)		104456
3	Valve Assembly]	5-125 psi (R374X1-1XX,		104457
4	Valve Spring	Stainless Steel		J	R374X1-6XX)		104437
5	Valve Guide "O" Ring	Nitrile			10-250 psi (R374X1-3XX)		104458
6	Valve Guide	Nylon		19	Tamper Kit		104455
7	Static Pressure Tube	Acetal			Service Kit (R374X1-X0X)		
8	Adjusting Assembly				(Relieving: Includes Items		104453
9	Bonnet	Aluminum			2, 3, 4, 5, 6)		
10	Bonnet Screw	Steel			Service Kit (R374X1-X2X)		
11	Handle	Acetal			(Non-Relieving: Includes Items		104454
12	Gauge "O" Ring	Nitrile		î	2, 3, 4, 5, 6)		
13	Flush Type Gauge						
	0-140 psi (R374X1-6XX)		104334	1			

2 15301955_ed1

Diaphragm Assembly 3000 Series R374X1-XXX Exploded Diagram

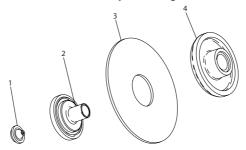


(Dwg. 15322043)

Diaphragm Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Relief Valve Seat	Nitrile	
2	Relief Valve	Zinc	
3	Diaphragm	Nitrile+Nylon	
4	Diaphragm Shell	Aluminum	

Valve Stem Assembly 3000 Series R374X1-XXX Exploded Diagram

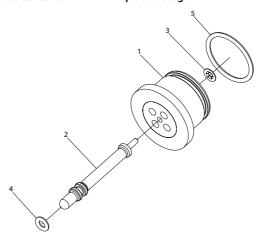


(Dwg. 15322050)

Valve Stem Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Valve Assembly	Nitrile+Nylon	
2	Stem	Brass	
3	Pushnut	Spring Steel	
4	Stem "O" Ring	Nitrile	
5	Valve "O" Ring	Nitrile	

15301955_ed1 3

Adjusting Assembly 3000 Series R374X1-XXX Exploded Diagram

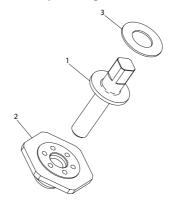

(Dwg. 15322068)

Adjusting Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Adjusting Bolt	C	
2	Adjusting Nut	Steel	
3	Lining	Teflon	

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to:

Product Safety Information Manual 15301765.

Product Information Manual 15301773.

 ${\it Maintenance\ Information\ Manual\ 15301781}.$

Manuals can be downloaded from fluids.ingersollrand.com.

Part No. 100400-72

fluids.ingersollrand.com

© 2009 Ingersoll Rand Company

